



Preparation is everything with this small fragile kit. Carefully pre-drill holes to aid both location and adjustment. There are however considerable gaps at the bases of the kits struts which you may wish to use instead to anchor the bracing wires. Pre-drill 0.2 and 0.4 holes (depending on thickness of PE part) where indicated by black circles.

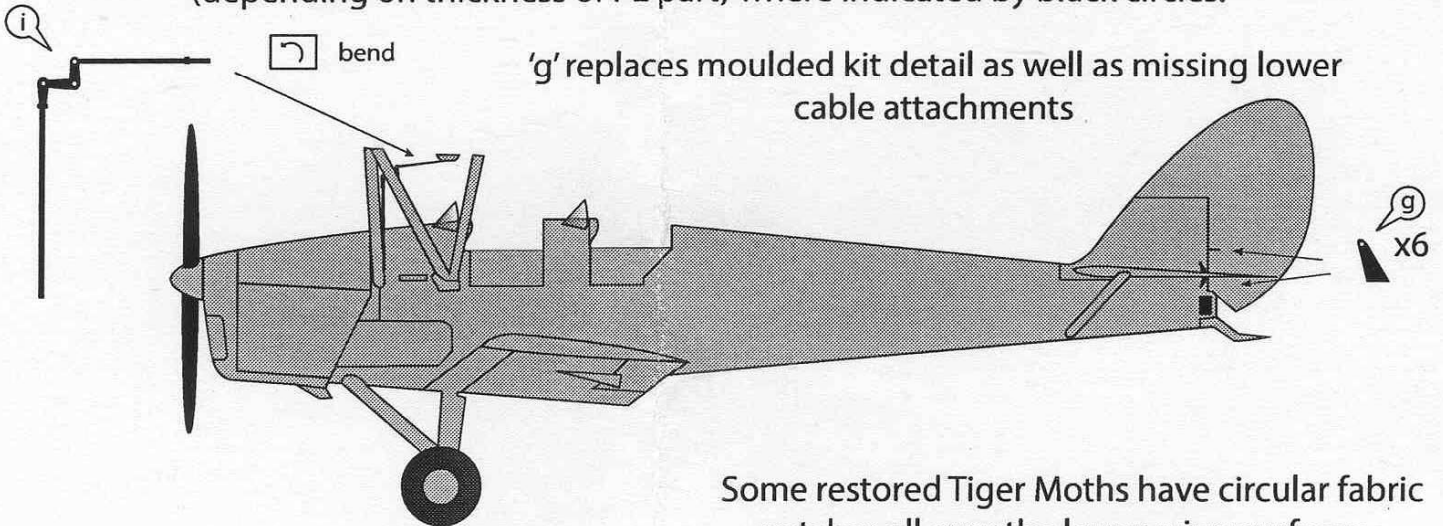

Some restored Tiger Moths have circular fabric patches all over the lower wing surfaces - some seem to have none at all! Use your own judgement

Place 4x 'h' 1mm out from struts


Upper wing lower surface

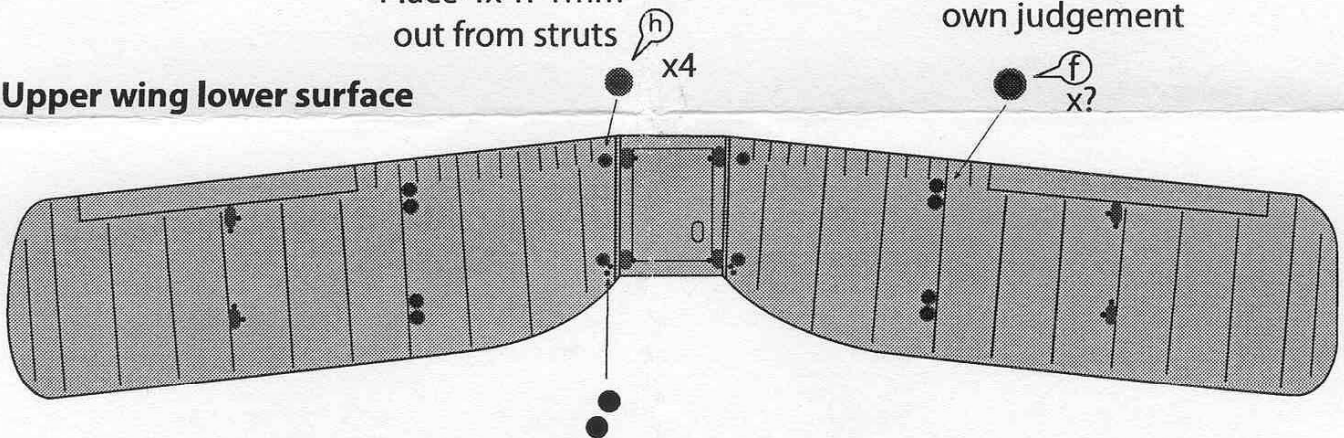

Note pattern of 0.4mm drill holes for C 'front' & 'back' upper!

Note pattern of 0.4mm drill holes for D 'front' & 'back' lower! Front hole is 1.5mm in from leading edge of wing

Lower wing upper surface

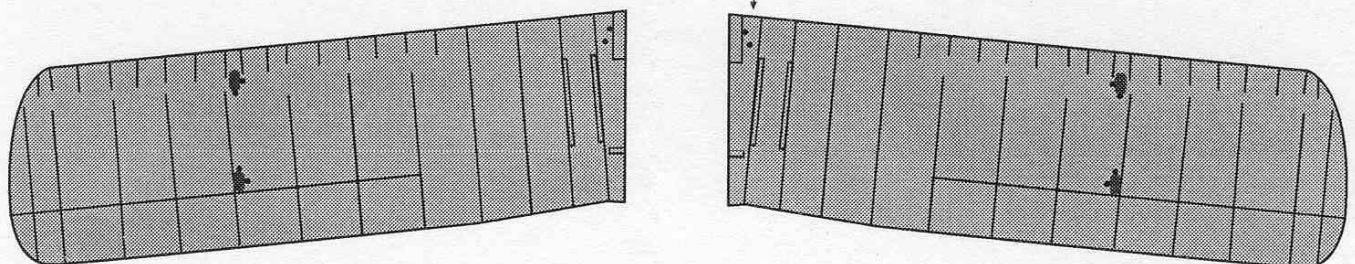

Note - PE Bracing wires follow Airfix kits alphabetical indicators and also diagram with the exception of 'A' upper which should be at base of upper forward struts - not in middle of petrol tank

Made in Hungary

1/72

S.

B.

S.

MODEL

72048

**De Havilland Dh-82 Tiger Moth
rigging wire + wheel set**

**Photo etched stainless steel & resin for
Airfix kit**

Resin upgrade set. Paint and glue are not included.



**FIGYELEM! A készlet műgyanta alkatrészeket tartalmaz.
Az összeépítéshez cian-akrilát alapú ragasztó ajánlott.
Mindig gondoskodjon arról, hogy a készlet építése
jól szellőző helyiségben történjen!
Óvakodjon a műgyanta por belélegzésétől, lenyelésétől!
Lenyelés esetén azonnal forduljon orvoshoz!
14 éves kor alatt nem ajánlott!**



**WARNING! Kit contains resin parts. Resin dust can be harmful.
Use cyanoacrylat glue for fixing parts.
Always work in a well-ventillated area.
May contain sharp edges, be careful with the small parts.
In case of swallowing, seek medical help
Not recommended for children under 14.**

**www.sbsmodel.com
contact@sbsmodel.com**

**S.B.S
model**