

ALL PARTS MOLDED TO SHAPE - EASY TO ASSEMBLE

NOTE: APPLY CEMENT TO BOTH JOINING SURFACES WHEN ASSEMBLING PARTS. APPLY CEMENT CAREFULLY. ASSEMBLE MODEL IN SUGGESTED NUMERICAL SEQUENCE.

WEIGHT NOSE OF MODEL IF SAME IS TO REST ON WHEELS


TRIM OFF EXCESS FLASH FROM ALL PIECES BEFORE ASSEMBLING. USE RAZOR OR KNIFE. CUT CAREFULLY.

1 APPLY CEMENT ALONG EDGES OF BODY HALVES AND CAREFULLY ASSEMBLE

FOR BEST ASSEMBLY RESULTS USE PLASTIC CEMENT.

2 CEMENT LANDING GEAR PROPELLER AND WHEELS AND FLAPS IN PLACE

IF MODEL IS TO BE PAINTED USE ENAMEL ONLY. DO NOT USE LACQUER OR LACQUER BASE MATERIALS AS THESE SOFTEN THE PLASTIC. APPLY ALL DECALS AFTER MODEL IS PAINTED.

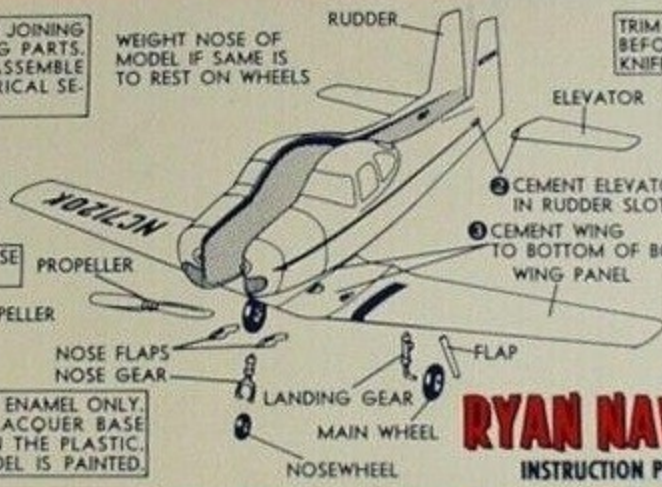

RYAN NAVION

INSTRUCTION PLANS

3 CEMENT PYLON INTO BASE. LET DRY, CEMENT MODEL TO PYLON TOP.

4 APPLY DECALS

NOTE: PARTS THAT FIT SNUG, APPLY CEMENT FIRST TO EASE TENSION

