


MUSTANG 2+2


Revell®

H-1109-380-A

1

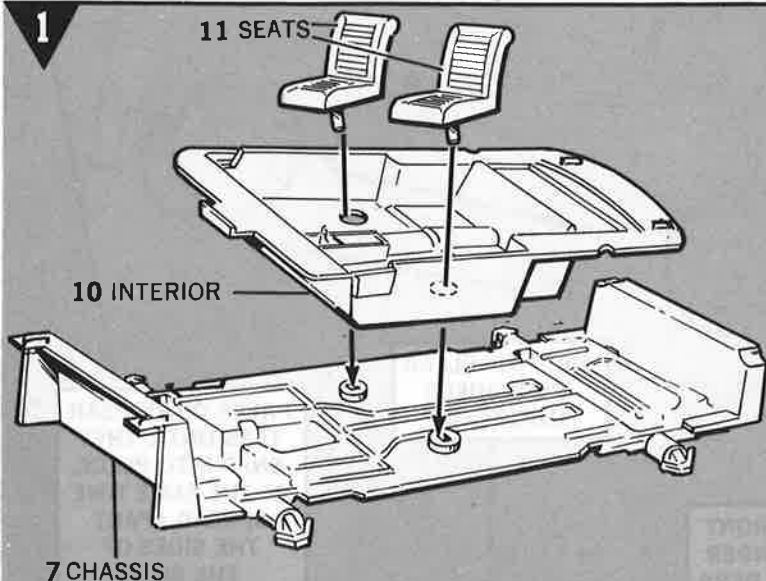

2

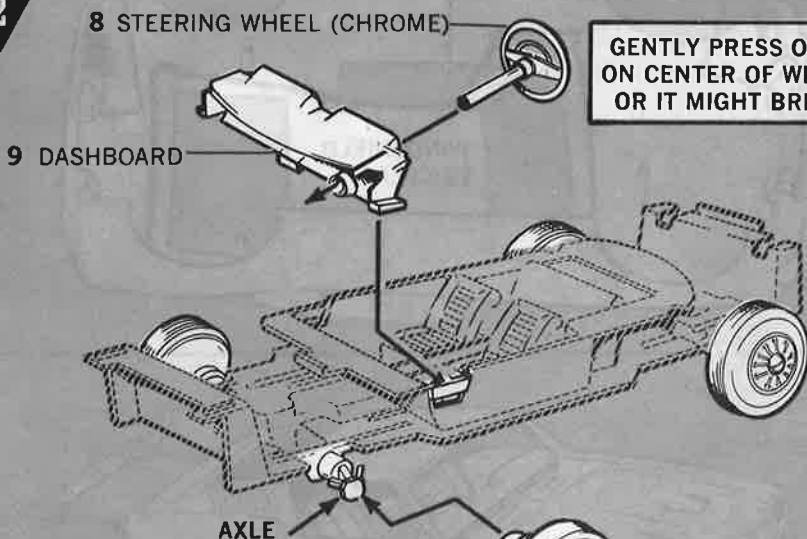

GENTLY PRESS ONLY
ON CENTER OF WHEEL
OR IT MIGHT BREAK


COMPLETE YOUR WHEELS.
PRESS THEM ONTO THE AXLES
UNTIL THEY MOVE EASILY.

4 INSIDE WHEEL HALF (BLACK)

5 OUTSIDE WHEEL HALF (BLACK)

6 WHEEL DISC
(CHROME)

3

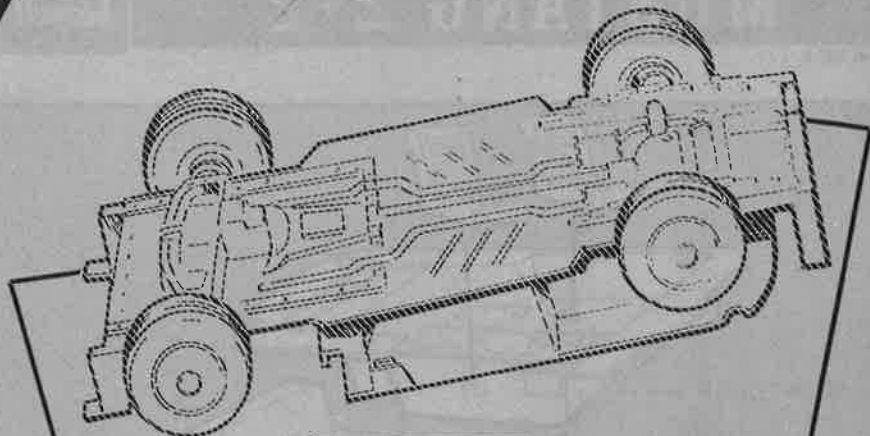


FIRST FIT CLEAR
WINDSHIELD
INTO PLACE

PRESS DOWN REAR
TABS UNTIL THEY
SNAP INTO PLACE.
AT THE SAME TIME
SPREAD APART
THE SIDES OF
THE BODY

SLIDE FRONT
TABS UNDER
TAB HOLDERS


2 BODY

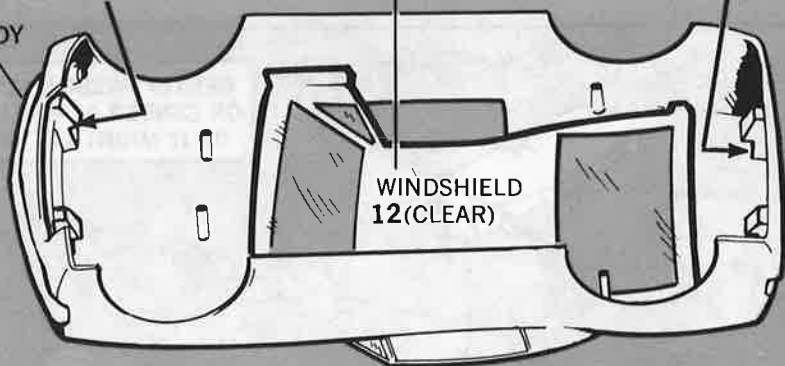

WINDSHIELD
12 (CLEAR)

4

1 FRONT BUMPER
(CHROME)

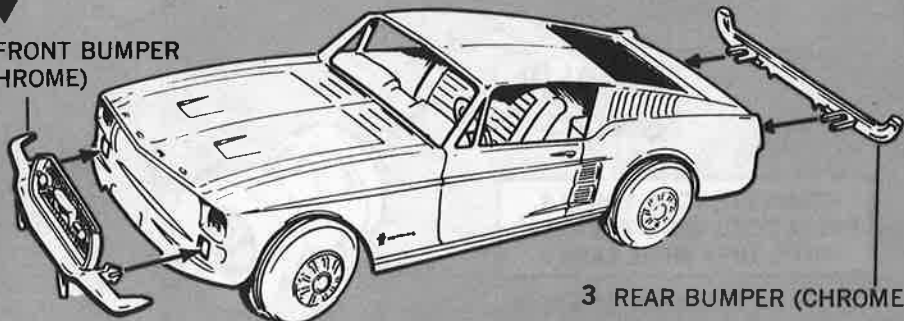

3 REAR BUMPER (CHROME)