


Consolidated B-24J Liberator

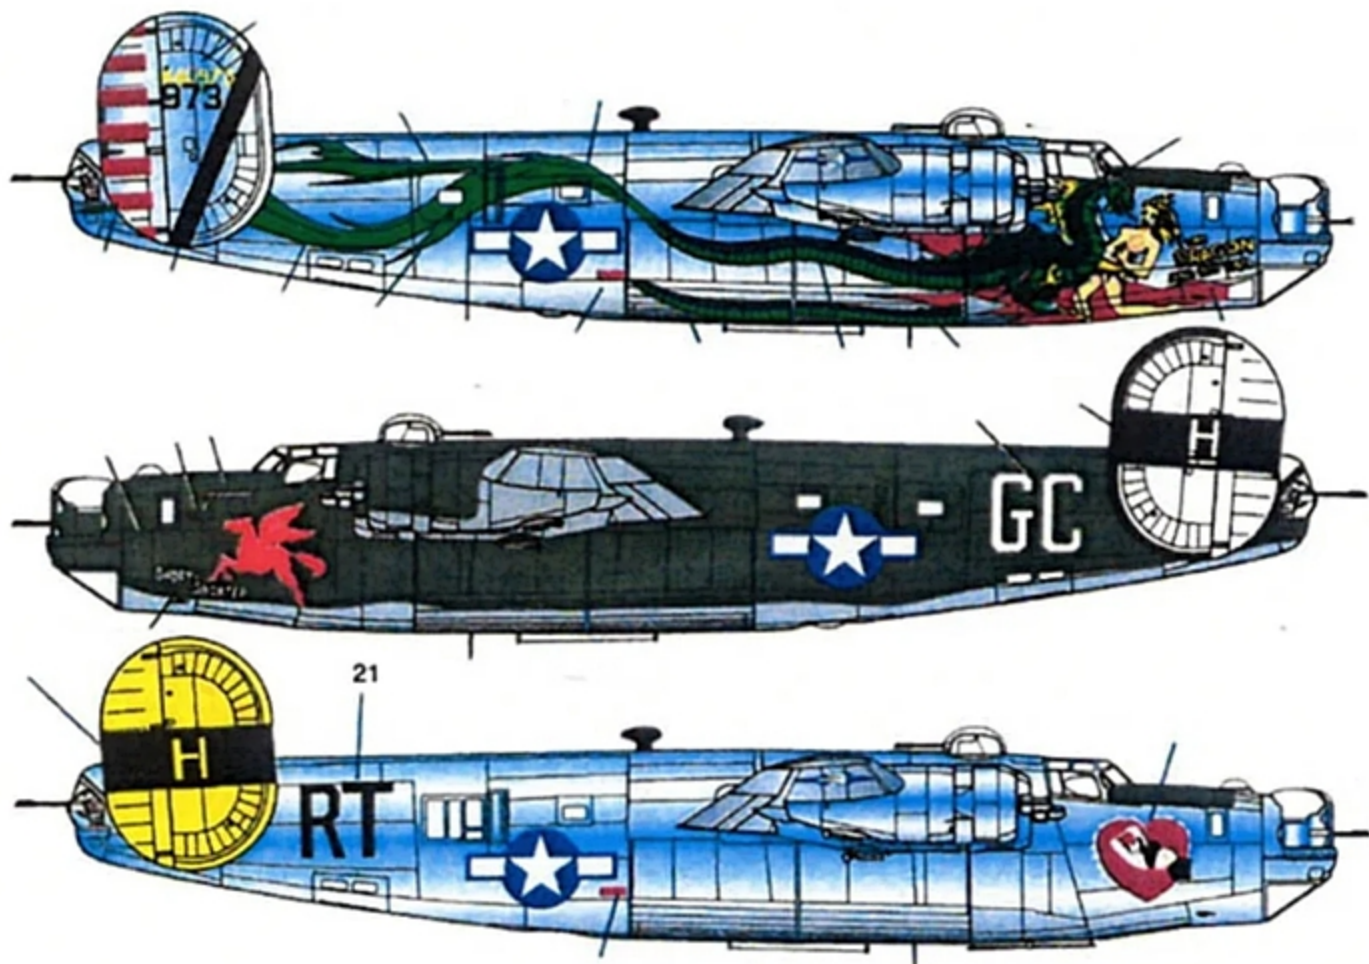

For the best results these decals should be applied to a gloss surface such as provided by either Xtracolor or Xtracrylix paints. Cut out the decal required and soak in warm water until the decal is released from the backing paper. Wet the area to be decaled with MICRO SET which will help to eliminate air trapped under the decal and position the decal.


After 5 or 10 minutes wet the decal with MICRO SOL which will soften the decal and ensure that it settles down over any surface detail. Allow the decal to dry for at least 12 hours. During this time some wrinkling of the decal may occur, this is normal. Do not touch the decal at this time.

Carefully check for small air bubbles and if there are any prick with a needle and apply a drop of MICRO SOL. After all air bubbles have been eliminated and the decals are dry wash the entire model with water to remove any excess decal adhesive.


When completely dry the whole model should be sprayed with a coat of Xtracolor or Xtracrylix with a coat of Flat, Satin or Gloss varnish depending on the finish required.

Store in a cool dry place, avoid sunlight, dampness or extremes of temperature and/or humidity.

The Dragon and His Tail, Consolidated B-24J-190-CO, 44-40973
 64th Bomb Squadron 43rd Bomb Group, Ie Shima, August, 1945

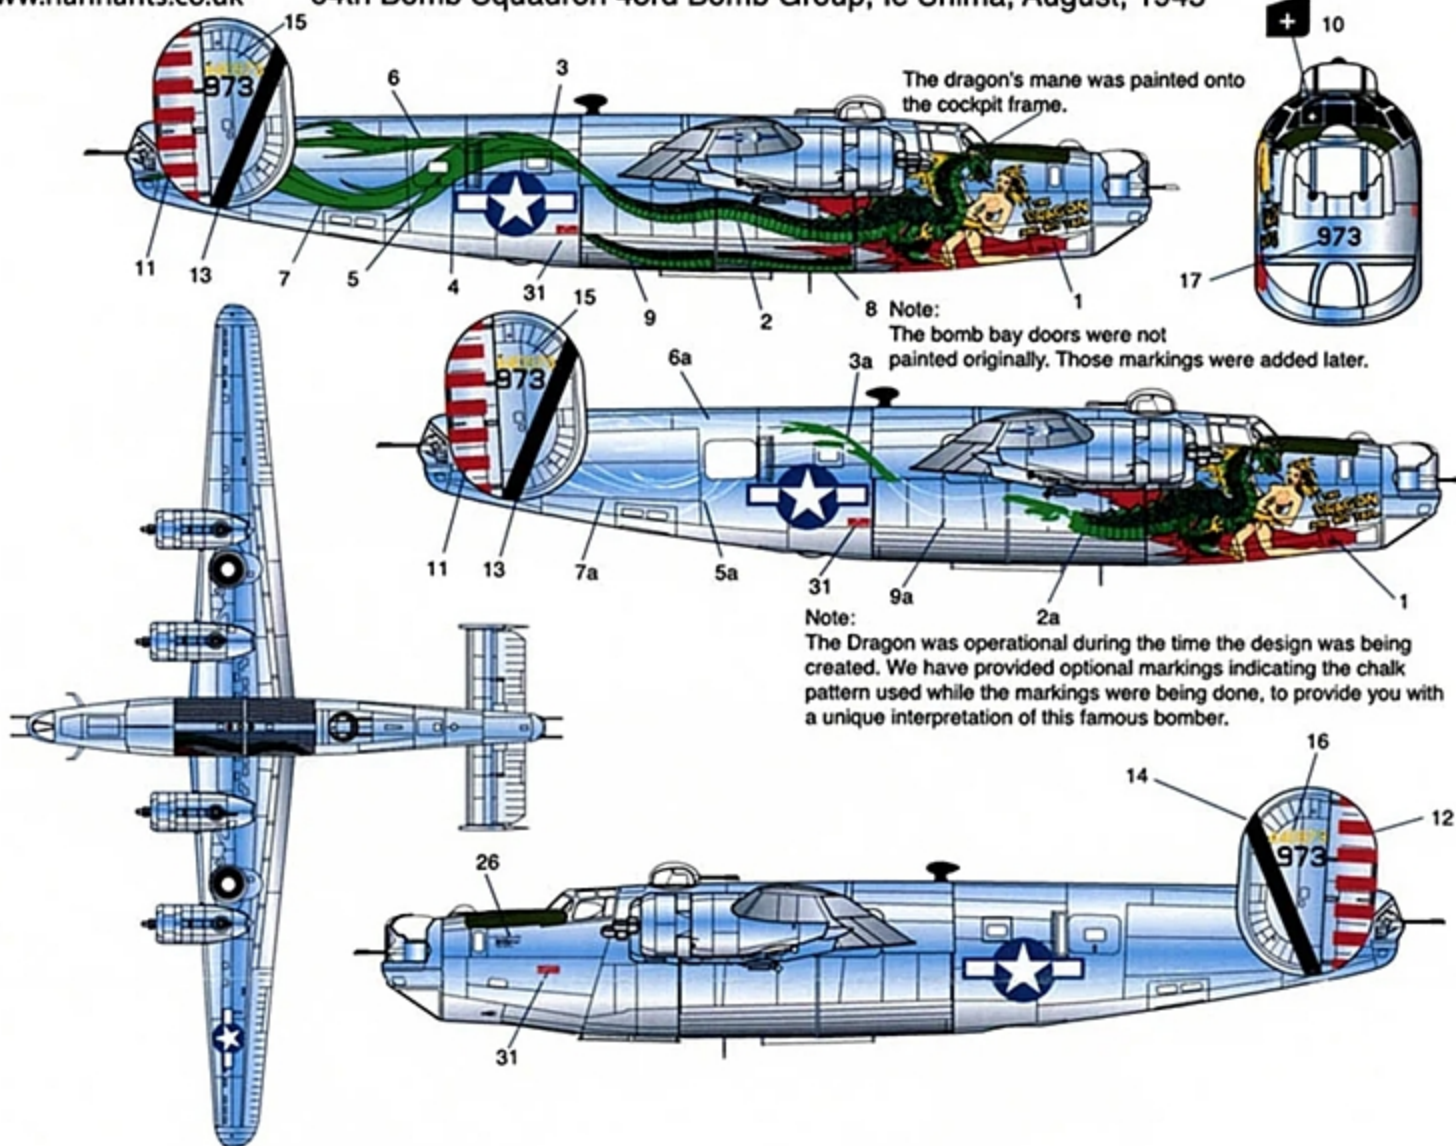


Kentucky Belle,
 Consolidated B-24J-155-CO, 44-40268, 706th Bomb Squadron, 446th Bomb Group,
 8th Air Force, Bungay, Suffolk, England

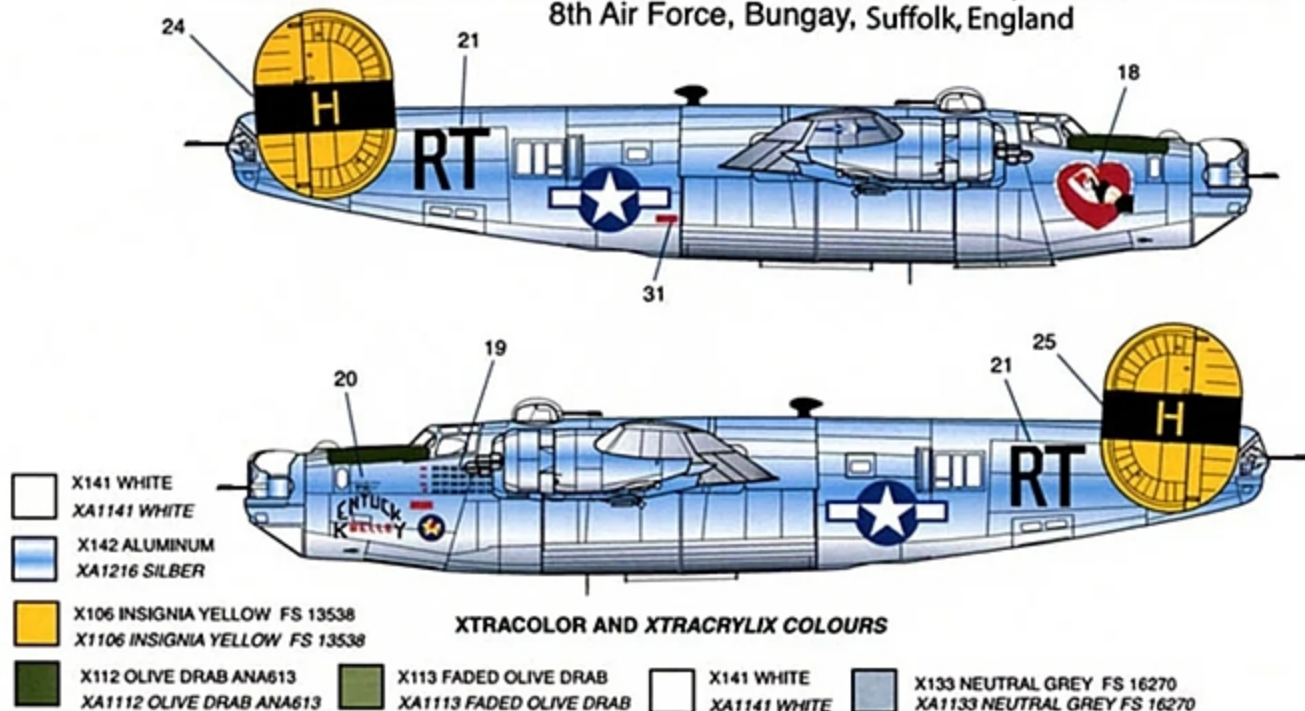


Short Snorter, Consolidated B-24J-60-CO, 42-99990, 14th CBW, 579th Bomb Squadron, 392nd Bomb Group, 8th Air Force. RAF Wendling, Norfolk, England.

Pre June-1944

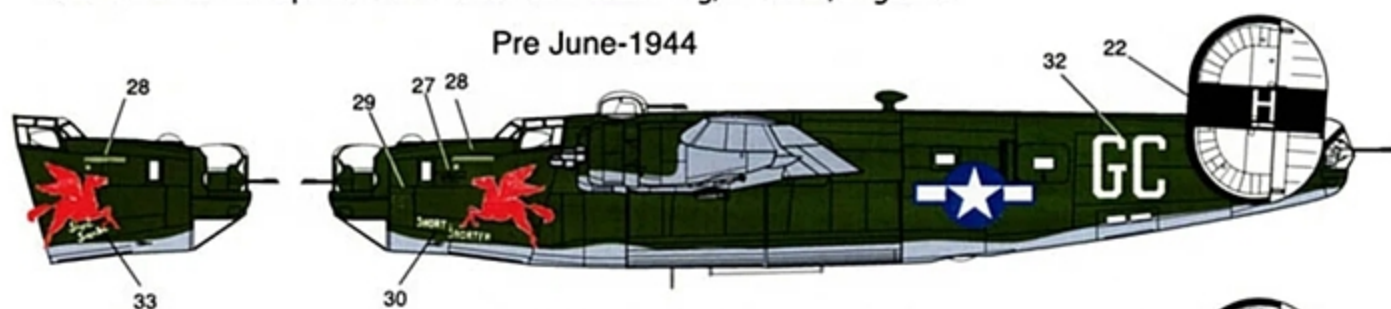


Post June-1944

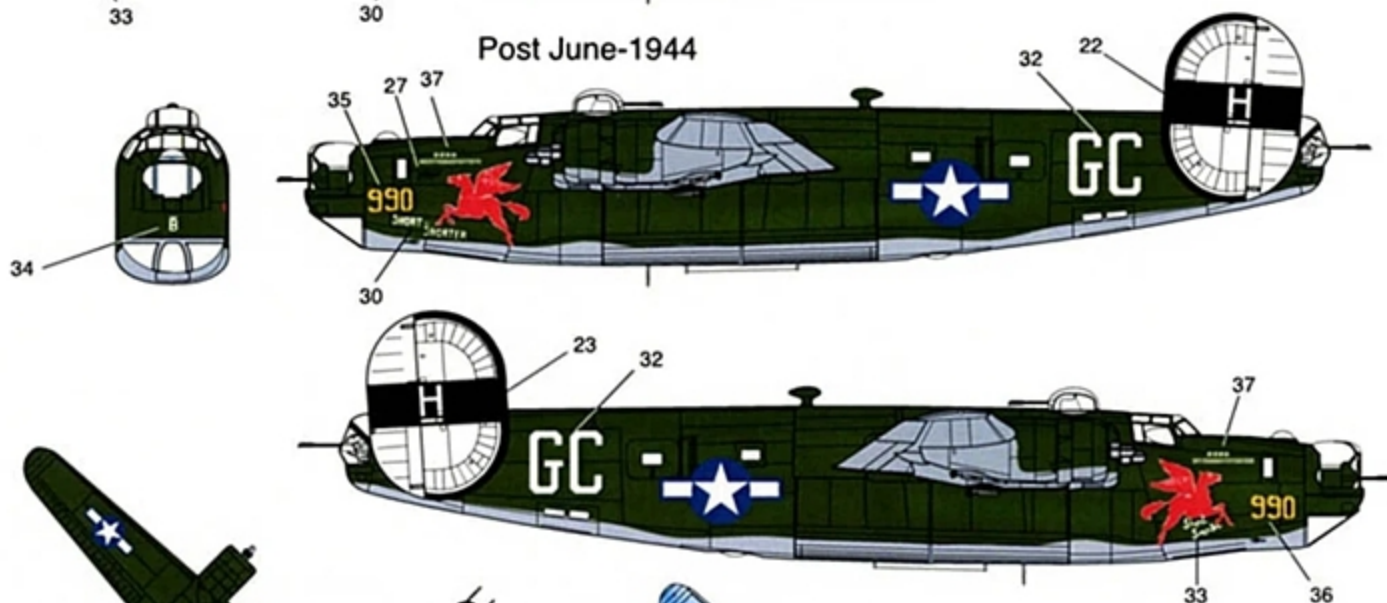

SHORT SNORTER
TOP




KENTUCKY BELLE
TOP

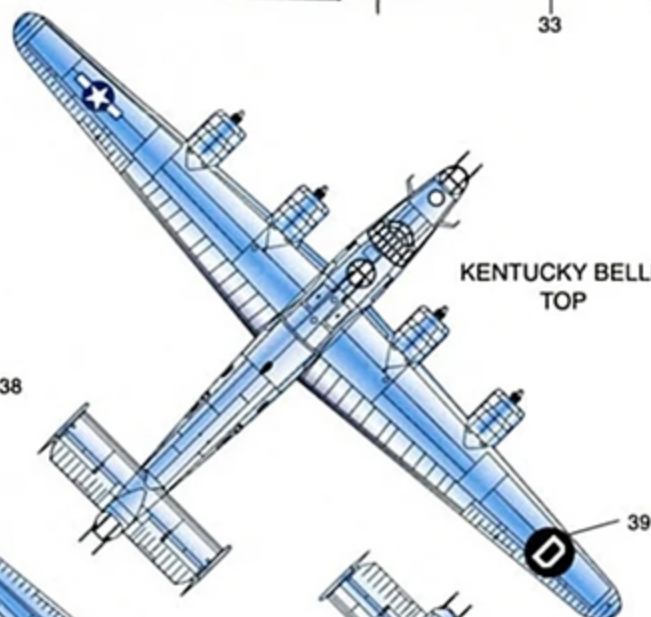

SHORT SNORTER
BOTTOM



KENTUCKY BELLE
BOTTOM

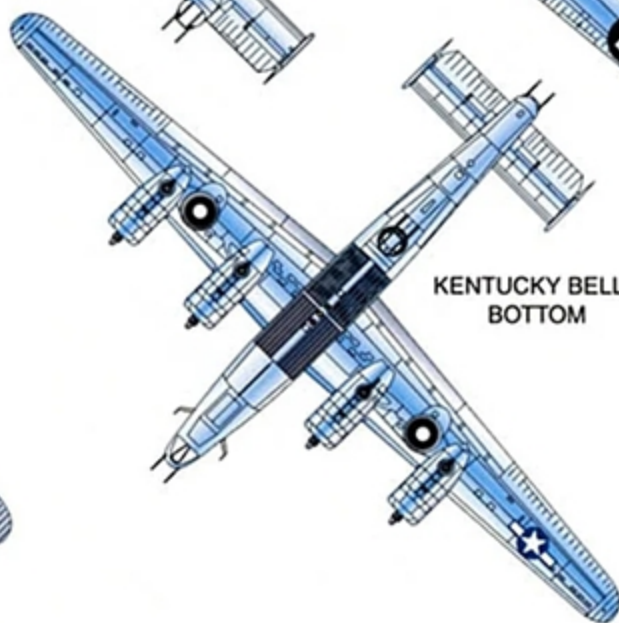

Visit our website for more decal titles.
www.hannants.co.uk