

TRIM OFF EXCESS FLASH FROM ALL PIECES BEFORE ASSEMBLING. USE RAZOR OR KNIFE. CUT CAREFULLY.

IF MODEL IS TO BE PAINTED USE ENAMEL ONLY. DO NOT USE LACQUER OR LACQUER BASE MATERIALS AS THESE SOFTEN THE PLASTIC. APPLY ALL DECALS AFTER MODEL IS PAINTED.

FOR BEST ASSEMBLY RESULTS USE LINDBERG PLASTIC CEMENT.

FORMERLY O-LIN POLYSTYRENE CEMENT

- 1 APPLY CEMENT ALONG EDGES OF BODY HALVES AND CAREFULLY ASSEMBLE
- 2 CEMENT PILOT AND SEAT ASSEMBLY INTO BODY NOTCHES

- 7 CEMENT COCKPIT CANOPY INTO PLACE ON BODY

- 4 CEMENT TAIL ASSEMBLY TO REAR OF BODY

10 COCKPIT CANOPY

PILOT
PILOT SEAT

WING TANK

- 3 ATTACH WING PANELS TO BODY AND BLOCK UP ENTIRE ASSEMBLY TO HOLD PROPER ALIGNMENT UNTIL CEMENT SETS

- 5 CEMENT WING TANK HALVES TOGETHER UNDER WING

WEIGHT NOSE OF MODEL IF SAME IS TO REST ON WHEELS

NOTE: PARTS THAT FIT SNUG, APPLY CEMENT FIRST TO EASE TENSION

NOTE: APPLY CEMENT TO BOTH JOINING SURFACES WHEN ASSEMBLING PARTS. APPLY CEMENT CAREFULLY WITH A BRUSH. ASSEMBLE MODEL IN SUGGESTED NUMERICAL SEQUENCE.

- 6 CEMENT LANDING GEAR AND FLAPS IN PLACE

NOSE GEAR

NOSEWHEEL

NOSE FLAP

MAIN WHEEL

PYLON


MAIN GEAR DOOR

MAIN GEAR STRUT

- 8 CEMENT PYLON INTO BASE, LET DRY, CEMENT MODEL TO PYLON TOP.


DISPLAY STAND
BASE


- 9 APPLY ALL DECALS AS SHOWN ON COMPLETED MODEL

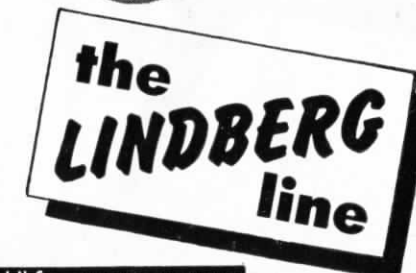

MANUFACTURED BY LINDBERG PRODUCTS, INC. SKOKIE, ILLINOIS

KIT NO. 500
LOCKHEED F-80C
"SHOOTING STAR"

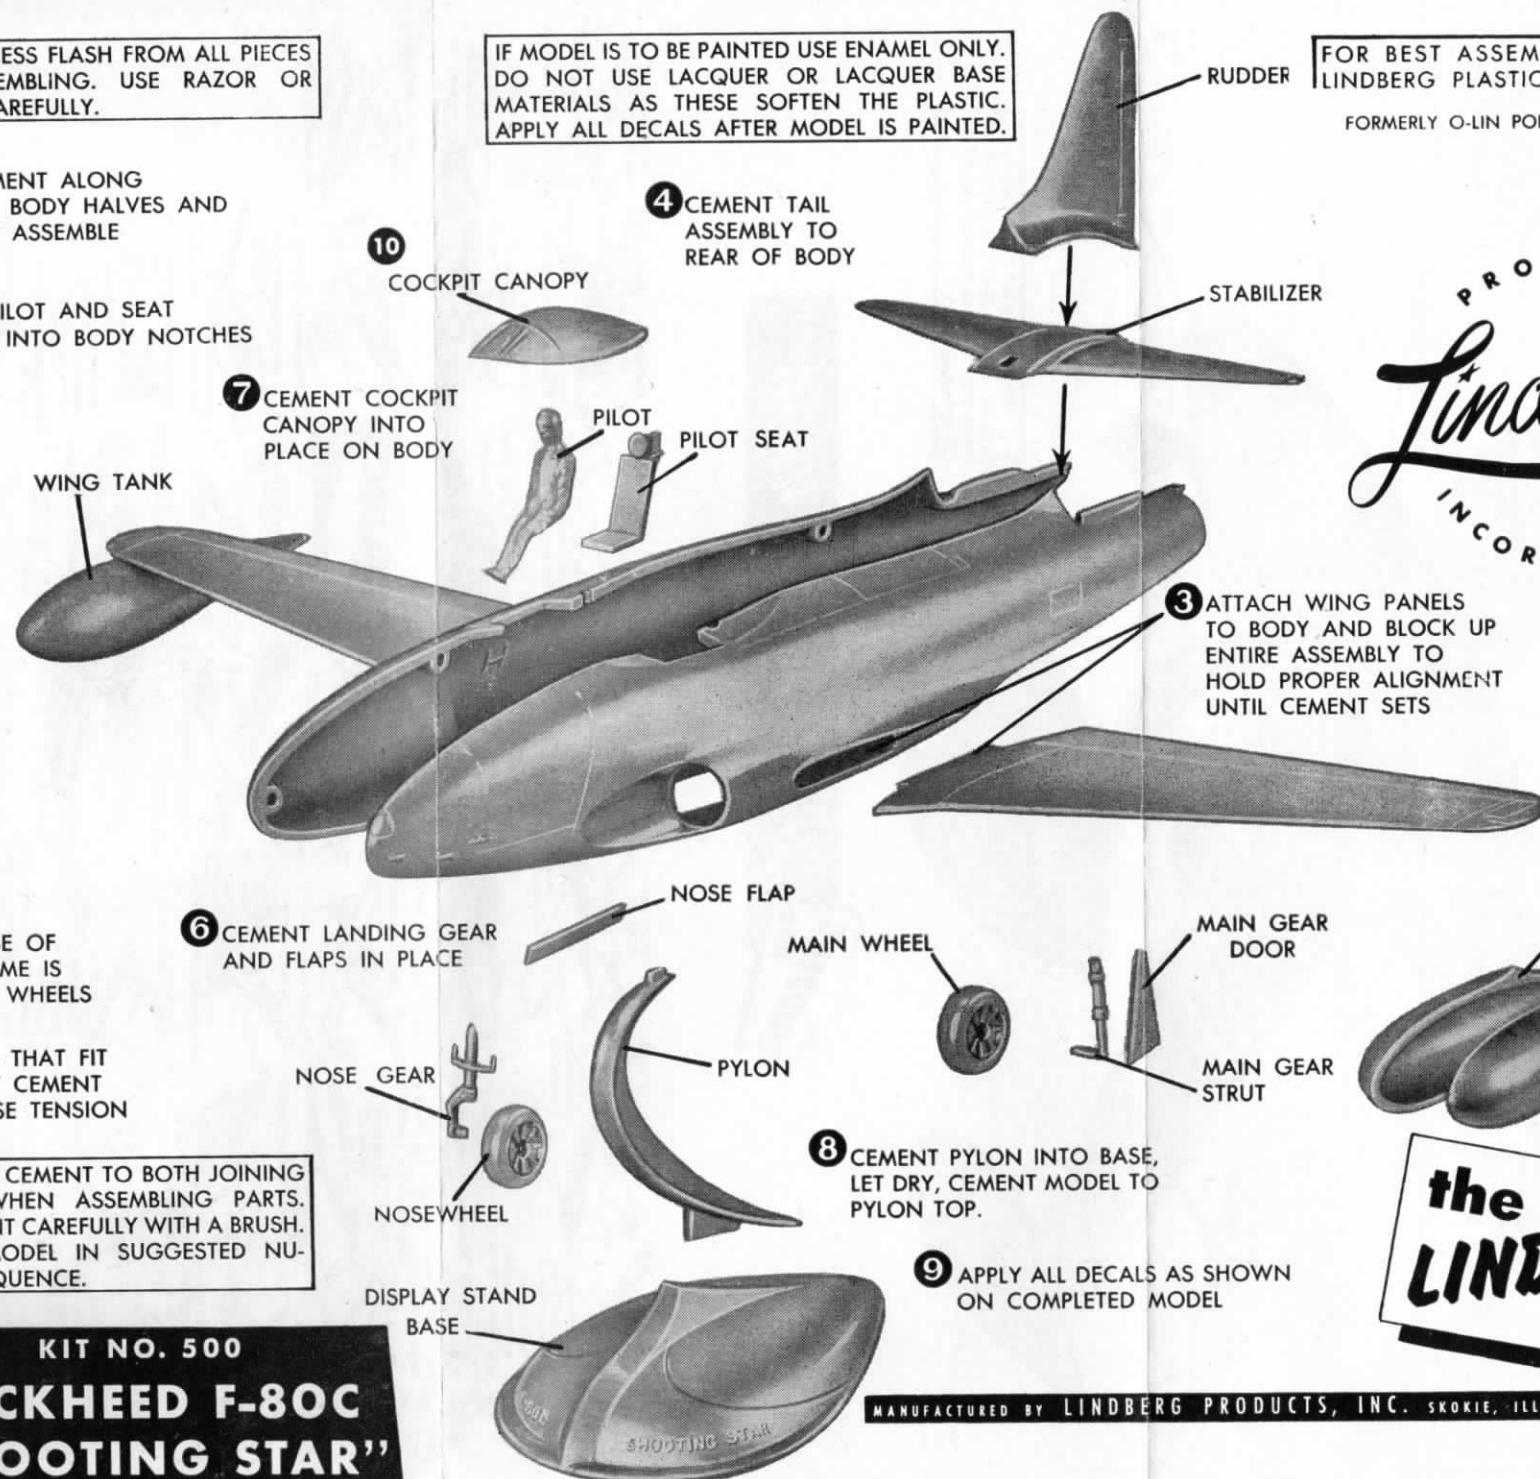

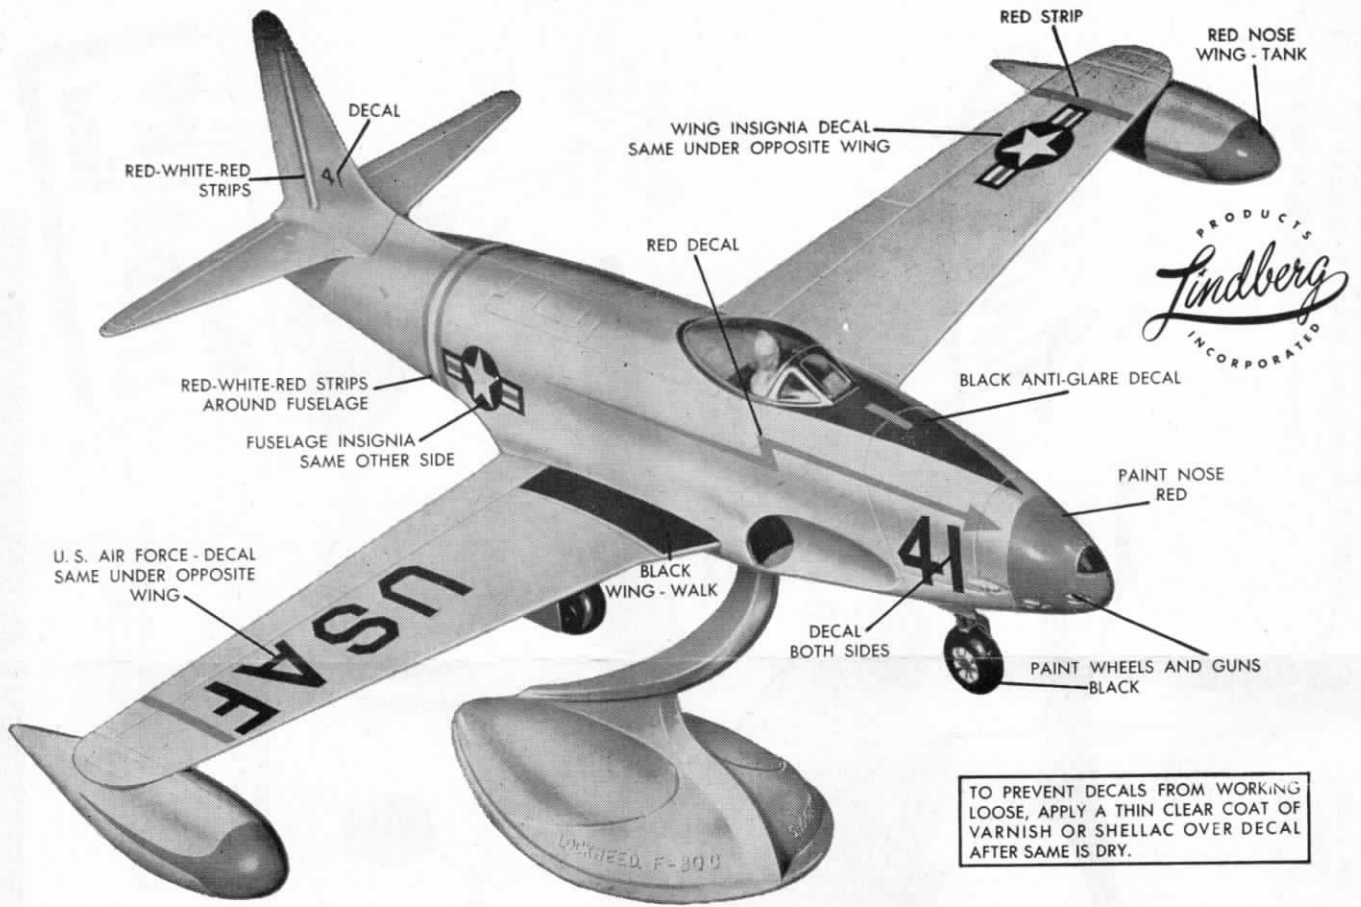

TO PREVENT DECALS FROM WORKING LOOSE, APPLY A THIN CLEAR COAT OF VARNISH OR SHELLAC OVER DECAL AFTER SAME IS DRY.

the LINDBERG line for True Scale Models

<p>JAP ZERO Kit No. 514 Wing-Span 9 1/2 in. Length 7 1/2 in.</p>	<p>SPYGLASS II Kit No. 536 Wing-Span 9 1/2 in. Length 7 1/2 in.</p>	<p>HEBICAR Kit No. 505</p>	<p>FLYING SAUCER Kit No. 517 Wing-Span 6 1/2 in.</p>	<p>SABRE "D" Kit No. 522 Length 10 1/2 in. Wing-Span 9 1/2 in.</p>	<p>CONVAIR XPY-1 V.T.O. Kit No. 526</p>	<p>STUKA JU-87B Kit No. 524</p>
<p>C&NW PIONEER LOCOMOTIVE & TENDER "HO" SCALE Kit No. 100 Length 5 1/2 in.</p>	<p>SPIRIT OF ST. LOUIS Kit No. 520 Length 7 1/2 in.</p>	<p>THUNDERCEPTER Kit No. 513 Wing-Span 7 1/2 in. Length 13 1/2 in.</p>	<p>RYAN NAVIAN Kit No. 507 Length 12 in. Kit No. 704</p>	<p>NAVY F7U-1 CUTLASS Kit No. 510 Wing-Span 9 1/2 in. Length 11 1/2 in.</p>	<p>NAVY CORSAIR F4U-SN Kit No. 512 Wing-Span 10 1/2 in. Length 8 1/2 in.</p>	<p>FLASH HYDROPLANE Kit No. V-801 Length 16 1/2 in.</p>
<p>REPUBLIC SEABEE Kit No. 503 Wing-Span 9 1/2 in. Length 7 1/2 in.</p>	<p>F-86 SABRE Kit No. 505 Wing-Span 9 1/2 in. Length 9 in.</p>	<p>BEECHCRAFT BONANZA Kit No. 504 Wing-Span 8 1/2 in. Length 6 1/2 in.</p>	<p>ATOMIC SUBMARINE Kit No. 704 Length 12 in.</p>	<p>REPUBLIC P-47D THUNDERBOLT Kit No. 408 Wing-Span 6 in. Length 5 1/2 in.</p>	<p>DOUGLAS SKYRAY F4D-1 Kit No. 523 Wing-Span 8 1/2 in. Length 11 in.</p>	
<p>F-80C SHOOTING STAR Kit No. 500 Wing-Span 10 in. Length 8 1/2 in.</p>	<p>BOEING PT-17 Kit No. 508 Length 5 1/2 in. Wing-Span 8 1/2 in.</p>	<p>PIPER STinson Kit No. 502 Wing-Span 8 1/2 in. Length 6 1/2 in.</p>	<p>PIPER CUB SPECIAL Kit No. 501 Wing-Span 8-11/16 in. Length 5 1/2 in.</p>	<p>RUSSIAN MIG-19 Kit No. 528 Length 8 1/2 in. Wing-Span 8 1/2 in.</p>	<p>ME 109F MESSERSCHMITT Kit No. 407 Wing-Span 6 in. Length 5 1/2 in.</p>	
<p>P.T. TORPEDO BOAT Kit No. 701 Length 15 in.</p>	<p>ERCOUPE CLUB AIR Kit No. 506 Length 4 1/2 in.</p>	<p>F4U-C STARFIRE Wing-Span 9 1/2 in. Length 9 1/2 in.</p>	<p>CHRIS-CRAFT CRUISER Kit No. 700 Length 10 in.</p>	<p>REPUBLIC P-47 THUNDERBOLT Kit No. 511 Wing-Span 10 1/2 in. Length 8 1/2 in.</p>	<p>NORTH AMERICAN P-51D MUSTANG Wing-Span 6 in. Length 5 1/2 in.</p>	
<p>PACKAGED AS ONE UNIT & DIFFERENT MODEL PLANES SERIES 300</p>	<p>MONOCOQUE 118 SPECIAL Wing-Span 5 1/2 in. Length 4 1/2 in.</p>	<p>SWEET PEAS Wing-Span 4 1/2 in. Length 4 in.</p>	<p>FLEET SUBMARINE Kit No. 703 Length 15 1/2 in.</p>	<p>F-88 VOO DOO Kit No. 509 Wing-Span 11 1/2 in. Length 15 1/2 in.</p>	<p>AIRCRAFT CARRIER U.S.S. WASP Kit No. 705 Length 20 1/2 in.</p>	
<p>WITCHAMATE Wing-Span 4 1/2 in. Length 4 1/2 in.</p>	<p>PETE Wing-Span 4-15/16 in. Length 4 1/2 in.</p>	<p>MIDGET MUSTANG Wing-Span 4 1/2 in. Length 3 1/2 in.</p>	<p>L.S.T. BOAT Kit No. 702 Length 16 1/2 in.</p>	<p>SUPERMARINE SPHIRE IX Kit No. 406 Wing-Span 6 in. Length 5 in.</p>	<p>BOEING B-17G Kit No. 525 Wing-Span 19 1/2 in. Length 14 1/2 in.</p>	
<p>KNIGHT TWISTER Wing-Span 4 1/2 in. Length 3 1/2 in.</p>						

the
LINDBERG
line

USAF

USAF 41



41

41

41



10127

INSTRUCTIONS

1. Cut each group of decals carefully from sheet as needed. 2. Place each portion in lukewarm water, one at a time, for about 10 seconds, to loosen decals. 3. Slide transfers off backing sheet into position on model. Refer to plan for correct location. 4. With moistened finger, smooth out carefully to remove excess water.

F-80C SHOOTING STAR

KIT NO. 500