Su-22M-3

ASSEMBLY INSTRUCTION

切り取ってください
REMOVE
ENTFERNEN
RETIRER
SEPARARE
切去

オモリを入れてください
INSERT BALLAST
BALLAST ZUGEBEN
A LESTER
AGGIUNGERE ZAVORRA
搭入壓艙物

- Ballast is not included.
- Ballast ist nicht im Bausatz enthalten.
- Le lestage n ést pas inclu.
- Zavorra non inclusa.
- El lastre no está incluido.
- 不包括壓艙物

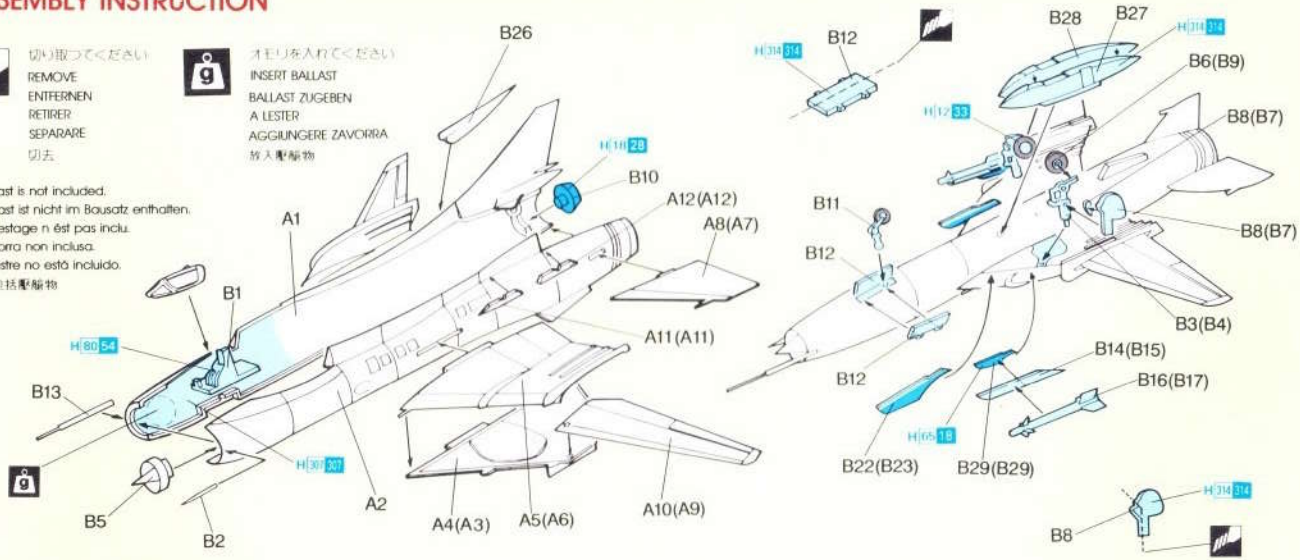

MARKING AND PAINTING

- Correct Method for Applying Decals

① Clean model surface with wet cloth.
② Cut each design out of decal sheet and dip them in warm water for 20 seconds.
③ Check with finger tip if design is loose on base paper. If so, place it on proper position on model and slide off base paper leaving design on model.
④ Move design to exact position with wet finger tip, and push out excess water and air bubbles under decal with soft cotton cloth.
⑤ When decals get dry, wipe off with wet cloth excess glue left around decals.

H 12 33	FLAT BLACK
H 18 28	STEEL
H 60 16	IJA GREEN
H 65 18	RLM BLACK GREEN 70
H 72 22	DARK EARTH
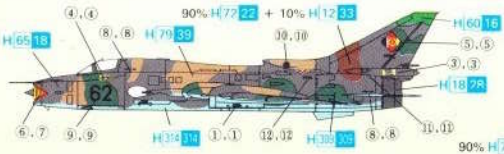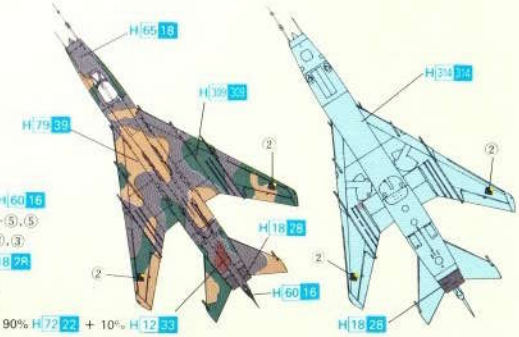
H 79 39	SANDY YELLOW
H 80 54	KHAKI GREEN
H 307 307	GRAY FS36320
H 309 309	DARK GREEN FS34079
H 314 314	LIGHT BLUE FS35622